



 
DIBBERN

MANUFAKTUR
MADE IN GERMANY


GOLD DEKORE | GOLD DECORS



GOLDEN FOREST | DECORATIONS

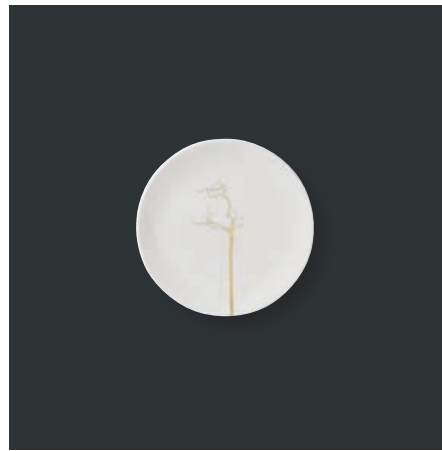

Teller flach 16 cm | *Side plate 16 cm*
03 016 072 00

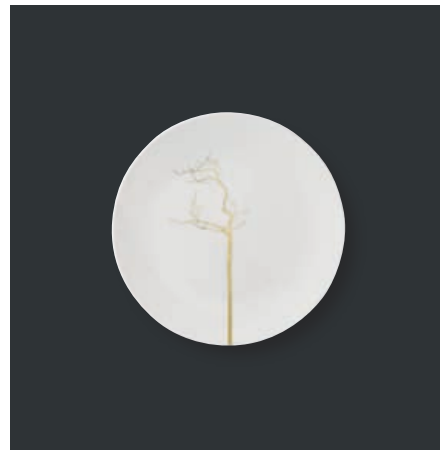 

Teller flach 21 cm | *Dessert plate 21 cm*
03 021 072 00




Teller flach 26 cm / 28 cm
Plate 26 cm / 28 cm
03 026 072 00 / 03 028 072 00




Teller flach 32 cm | *Buffet plate 32 cm*
03 032 072 00



Teller tief 22,5 cm | *Soup plate 22.5 cm*
03 055 072 00

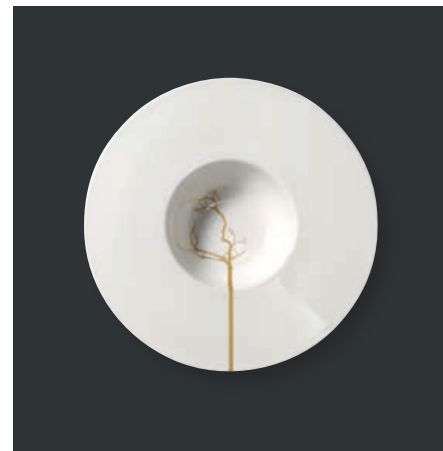 

 Teller tief breiter Rand 26 cm, 0,25 l
Deep plate wide rim 26 cm, 0.25 l
03 056 072 00

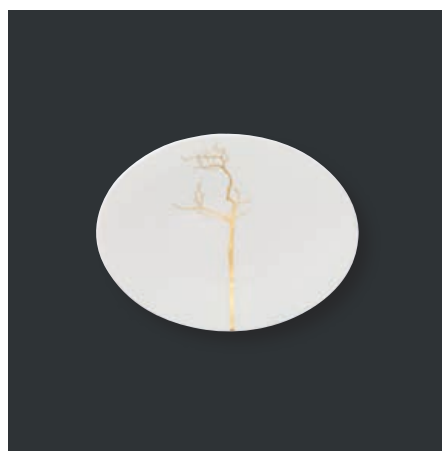

Beilage oval 24 cm | *Oval dish / plate 24 cm*
03 218 072 00




Platte oval 32 cm | *Fischteller*
Oval platter 32 cm / Fish plate
03 220 072 00




Platte oval 39 cm | *Oval platter 39 cm*
03 222 072 00


GOLDEN FOREST | DECORATIONS

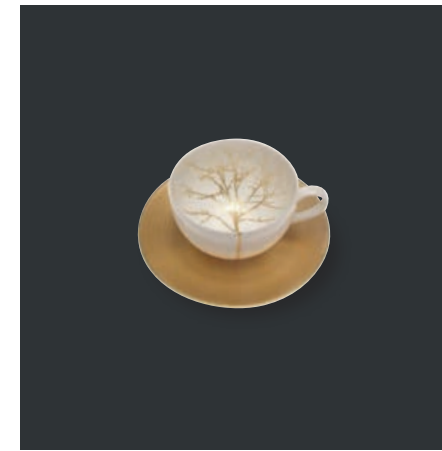 

 
Espresso Obertasse rund 0,11 l
Espresso cup round 0.11 l
Untertasse 0,11 l Pure Gold
Saucer 0.11 l Pure Gold
01 102 072 00 / 01 103 018 00

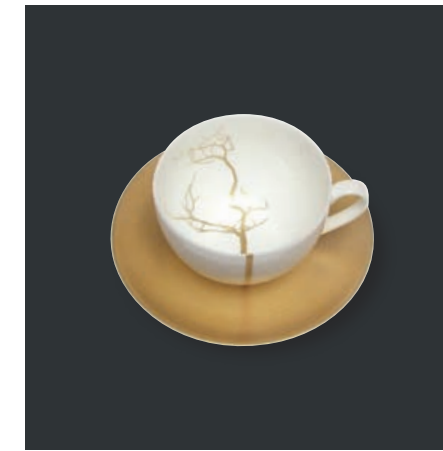

 
Kaffee Obertasse rund 0,25 l
Coffee / Tea cup round 0.25 l
Untertasse 0,20 l / 0,25 l Pure Gold
Saucer 0.20 l / 0.25 l Pure Gold
01 108 072 00 / 01 109 018 00

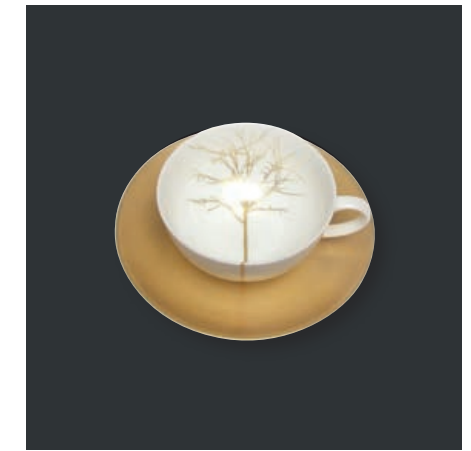

 Tee Obertasse 0,20 l
Tea cup low rim 0.20 l
Untertasse 0,20 l / 0,25 l Pure Gold
Saucer 0.20 l / 0.25 l Pure Gold
01 120 072 00 / 01 109 018 00

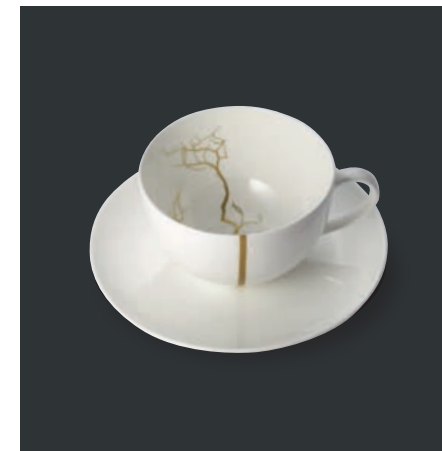

 
Café au lait Obertasse 0,32 l
Breakfast cup 0.32 l
Untertasse 0,28 l / 0,32 l weiß
Saucer 0.28 l / 0.32 l white
01 112 072 00 / 01 113 000 00

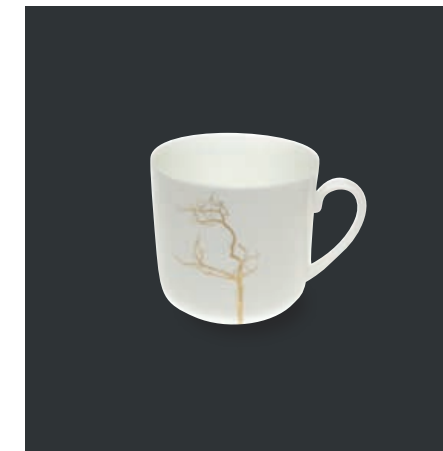

Becher mit Henkel 0,32 l
Mug 0.32 l
01 144 072 00



Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 072 00

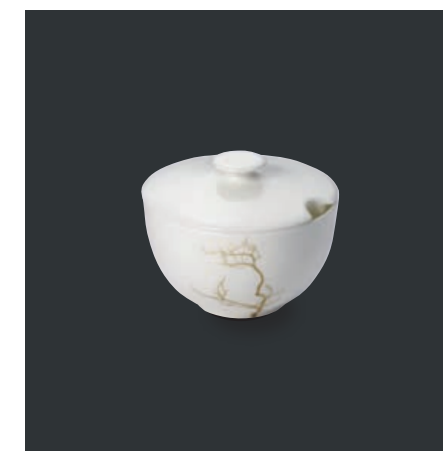 


Zuckerdose rund 0,25 l
Sugar bowl with lid round 0.25 l
01 160 072 00




Teekanne rund 1,30 l | *Teapot round 1.30 l*
01 174 072 00


GOLDEN FOREST | DECORATIONS

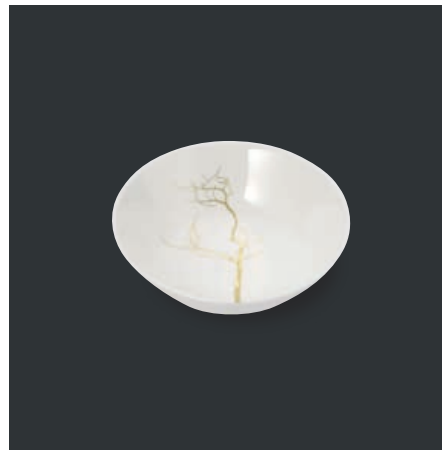 

Dessertschale 16 cm | *Oatmeal bowl 16 cm*
01 207 072 00

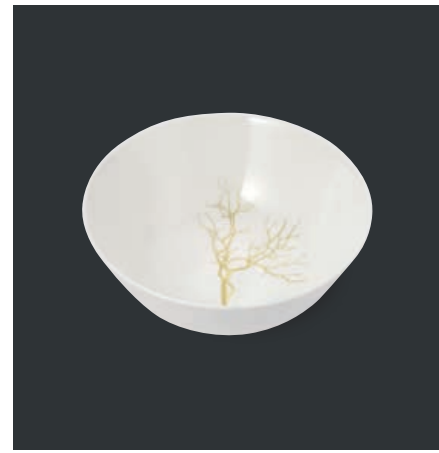 

Schüssel 21 cm | *Salad bowl 21 cm*
01 210 072 00

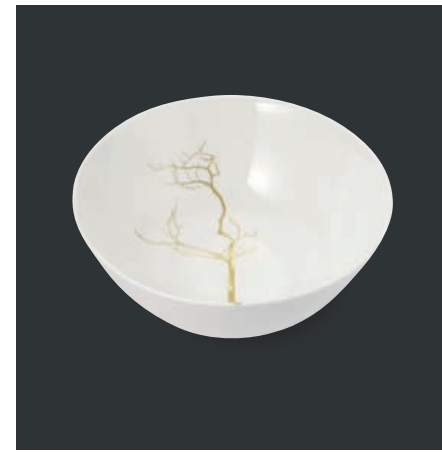 

Schüssel 24 cm | *Salad bowl 24 cm*
01 212 072 00




Schüssel 28 cm | *Salad bowl 28 cm*
01 214 072 00



Pastateller tief 26 cm | *Pasta plate deep 26 cm*
03 064 072 00



Reisschale 13 cm | *Chinese bowl 13 cm*
04 198 072 00

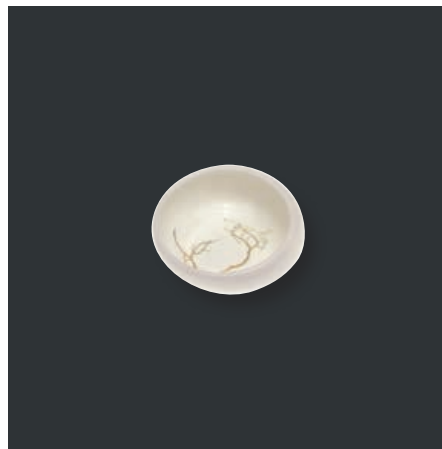 

Schale Mini 6 cm | *Little bowl 6 cm*
08 340 072 00



Schale 26 cm | *Deep plate / Bowl 26 cm*
08 341 072 00



Schale 32 cm | *Deep plate / Bowl 32 cm*
08 342 072 00

COSMOS

GOLDEN FOREST | DECORATIONS



Beilage oval 24 cm | *Oval dish / plate 24 cm*
01 218 072 00



Platte 15 x 32 cm | *Rectangular dish 15 x 32 cm*
01 182 072 00



Tortenplatte 32 cm | *Cake plate 32 cm*
01 185 072 00




Butterdose | *Butter dish*
01 188 072 00



Sauciere 0,48 | *Sauce boat 0.48 l*
Sauciere Untere Pure Gold
Sauce boat stand Pure Gold
01 232 072 00 / 01 234 018 00



Deckelschüssel 2 l | *Covered vegetable dish 2 l*
01 230 072 00
Terrine 2,95 l | *Soup tureen 2.95 l*
01 231 072 00

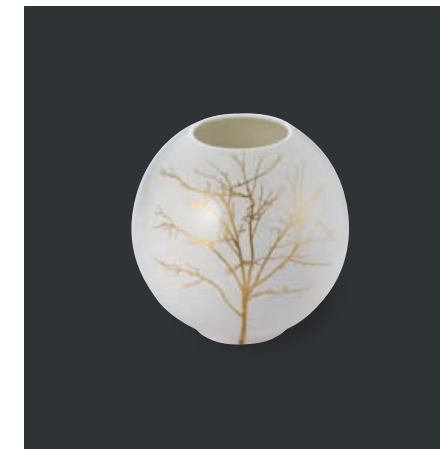 

Kugelvase 14 cm | *Vase spherical 14 cm*
08 300 072 00



Vase zylindrisch 21 cm | *Vase cylindrical 21 cm*
08 312 072 00




Vase zylindrisch 29 cm | *Vase cylindrical 29 cm*
08 314 072 00

GOLD LEAF | DECORATIONS




Design: Bodo Sperlein, London

GOLD LEAF | DECORATIONS

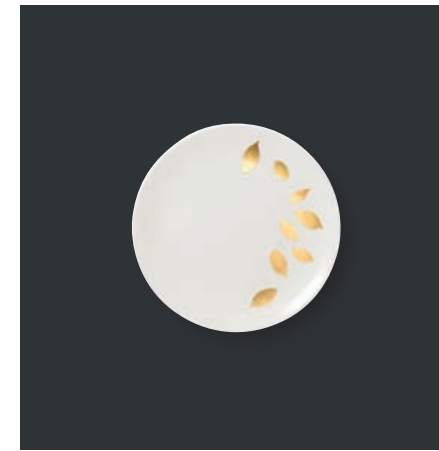 

Teller flach 16 cm | Side plate 16 cm
03 016 088 00

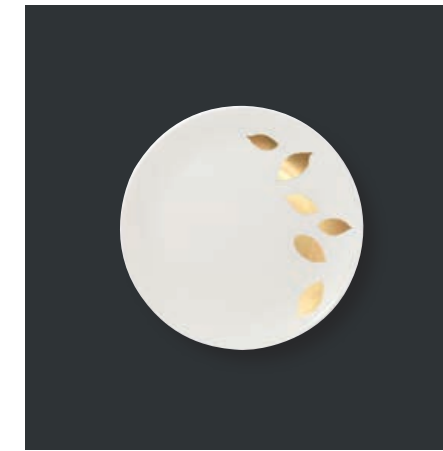 

Teller flach 21 cm | Dessert plate 21 cm
03 021 088 00




Teller flach 28 cm | Plate 28 cm
03 028 088 00




Teller flach 32 cm | Buffet plate 32 cm
03 032 088 00



Teller tief 22,5 cm | Soup plate 22.5 cm
03 055 088 00

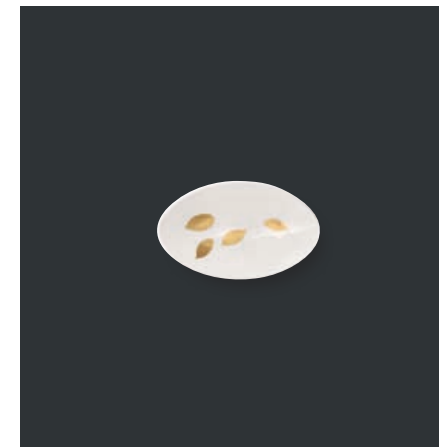 


Beilage 15 cm | Oval dish 15 cm
03 217 088 00

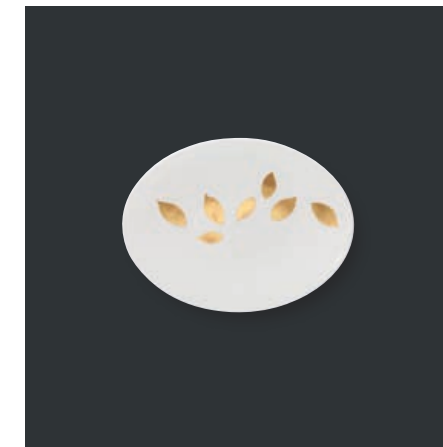 

Beilage / Teller oval 24 cm
Oval dish / Plate 15 cm
03 218 088 00

GOLD LEAF | DECORATIONS

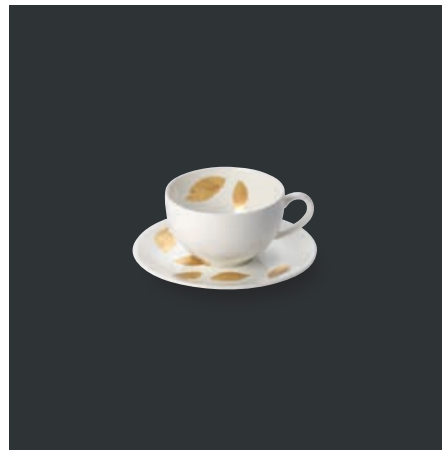 

Espresso Obertasse rund 0,11 l
Espresso cup round 0.11 l
Untertasse 0,11 l | Saucer 0.11 l
01 102 088 00 / 01 103 088 00




Kaffee Obertasse rund 0,25 l
Coffee / Tea cup round 0.25 l
Untertasse 0,20 l / 0,25 l | Saucer 0.20 l / 0.25 l
01 108 088 00 / 03 109 088 00



Tee Obertasse 0,20 l
Tea cup low rim 0.20 l
Untertasse 0,20 l / 0,25 l | Saucer 0.20 l / 0.25 l
01 120 088 00 / 03 109 088 00



Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 088 00

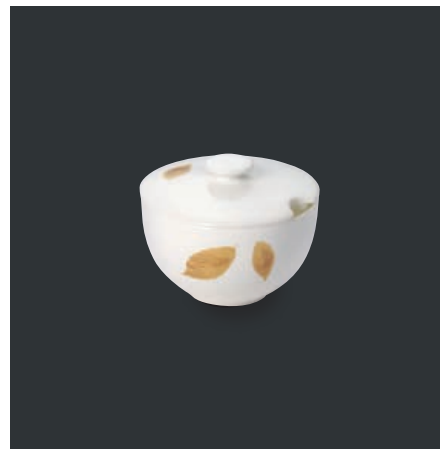 

Zuckerdose rund 0,25 l
Sugar bowl with lid round 0.25 l
01 160 088 00




Teekanne rund 1,30 l
Teapot round 1.30 l
01 174 088 00

GOLDEN PEARLS | DECORATIONS



Design: Bodo Sperlein, London

GOLDEN PEARLS | DECORATIONS

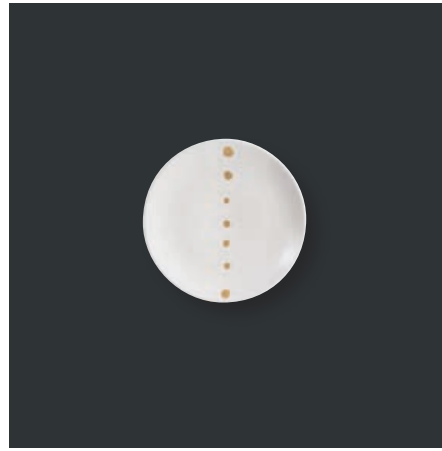 

Teller flach 16 cm | *Side plate 16 cm*
03 016 020 00



Teller flach 21 cm | *Dessert plate 21 cm*
03 021 020 00



Teller flach 28 cm | *Plate 28 cm*
03 028 020 00



Teller flach 32 cm | *Buffet plate 32 cm*
03 032 020 00



Platte oval 32 cm | *Fischteller*
Oval platter 32 cm / Fish plate 24 cm
03 220 020 00



Platte oval 39 cm | *Oval platter 39 cm*
03 222 020 00



Schale 19 cm | *Dish 19 cm*
01 208 020 00



Teller tief 22,5 cm | *Soup plate 22.5 cm*
03 055 020 00



Pastateller 26 cm | *Pasta plate deep 26 cm*
03 064 020 00

GOLDEN PEARLS | DECORATIONS



Espresso Obertasse rund 0,11 l |
Espresso cup round 0.11 l
Untertasse 0,11 l Pure Gold
Saucer 0.11 l Pure Gold
01 102 020 00 / 01 103 018 00



Kaffee Obertasse rund 0,25 l |
Coffee / Tea cup round 0.25 l
Untertasse 0,20 l / 0,25 l Pure Gold
Saucer 0.20 l / 0.25 l Pure Gold
01 108 020 00 / 01 109 018 00



Tee Obertasse 0,20 l |
Tea cup low rim 0.20 l
Untertasse 0,20 l / 0,25 l Pure Gold
Saucer 0.20 l / 0.25 l Pure Gold
01 120 020 00 / 01 109 018 00



Becher mit Henkel 0,32 l |
Mug 0.32 l
01 144 020 00




Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 020 00



Zuckerdose rund 0,25 l |
Sugar bowl with lid round 0.25 l
01 160 020 00



Teekanne rund 1,30 l | *Teapot round 1.30 l*
01 174 020 00

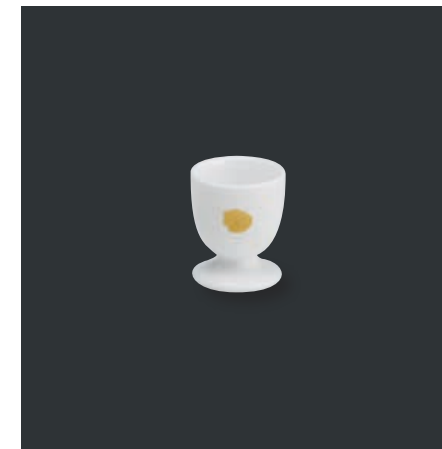 

Eierbecher mit Fuß | *Egg cup tall*
01 190 020 00



Butterdose | *Butter dish*
01 188 020 00

GOLDEN PEARLS | DECORATIONS



Beilage oval 15 cm | *Oval dish 15 cm*
03 217 020 00




Beilage / Teller oval 24 cm
Oval dish / plate 24 cm
03 218 020 00



Tortenplatte 32 cm | *Cake plate 32 cm*
01 185 020 00




Sauciere 0,48 l | *Sauce boat 0.48 l*
Sauciere Untere weiß |
Sauce boat stand white
01 232 020 00 / 01 234 000 00

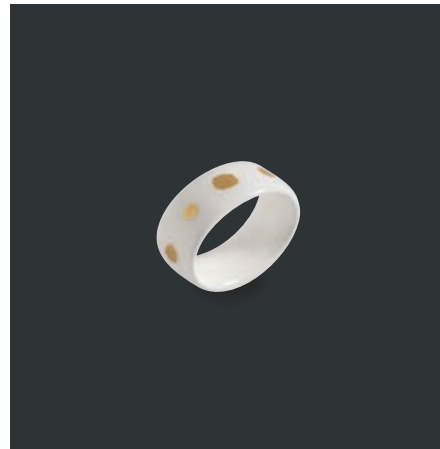 

Serviettenring oval, Breite 2 cm
Napkin ring oval, breadth 2 cm
01 280 020 00



Bol 0,4 l Ø 12,5 cm | *Bowl 0.4 l Ø 12.5 cm*
01 203 020 00

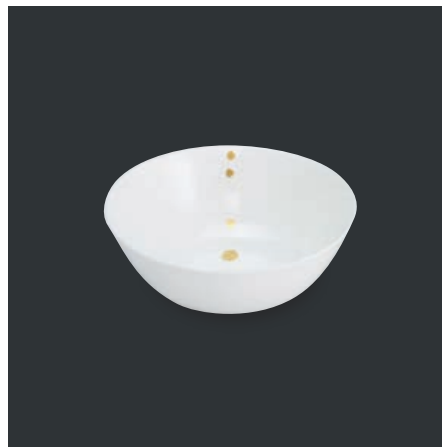 

Schüssel 21 cm | *Salad bowl 21 cm*
01 210 020 00



Schüssel 24 cm | *Salad bowl 24 cm*
01 212 020 00



Schüssel 28 cm | *Salad bowl 28 cm*
01 214 020 00

GOLDEN PEARLS | DECORATIONS



Vase zylindrisch 21 cm | *Vase cylindrical 21 cm*
08 312 020 00



Vase zylindrisch 29 cm
Vase cylindrical 29 cm
08 314 020 00



Design: Sylvie Langet, Paris



Teller flach 17 cm | *Side plate 17 cm*
10 017 142 00
 Teller flach 22 cm | *Plate 22 cm*
10 022 142 00



Teller flach 28 cm | *Plate 28 cm*
10 028 142 00



Teller flach 32 cm | *Buffet plate 32 cm*
10 032 142 00



Teller tief 25 cm | *Soup plate 25 cm*
10 055 142 00



Gourmetseller flach 31 cm | *Gourmet-plate flat 31 cm*
03 031 142 00



Teller tief breiter Rand 26 cm, 0,25 l | *Deep plate wide rim 26 cm, 0.25 l*
03 056 142 00



Platte oval 34 cm | *Oval platter 34 cm*
10 220 142 00



Platte oval 39 cm | *Oval platter 39 cm*
10 222 142 00



CLASSIC

Schüssel 21 cm | *Salad bowl 21 cm*
01 210 142 00
 Schüssel 28 cm | *Salad bowl 28 cm*
01 214 142 00

ORIENTAL | DECORATIONS



Espresso Obertasse rund 0,11 l
Espressocup round 0.11 l
01 102 142 00
Untertasse 0,11 l | *Saucer 0.11 l*
01 103 142 00




Kaffee Obertasse rund 0,25 l
Coffee/Tea cup round 0.25 l
01 108 142 00
Untertasse 0,20 l / 0,25 l | *Saucer 0.25 l / 0.25 l*
03 109 142 00



Teekanne rund 1,30 l | *Teapot round 1.30 l*
01 174 142 00



Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 142 00

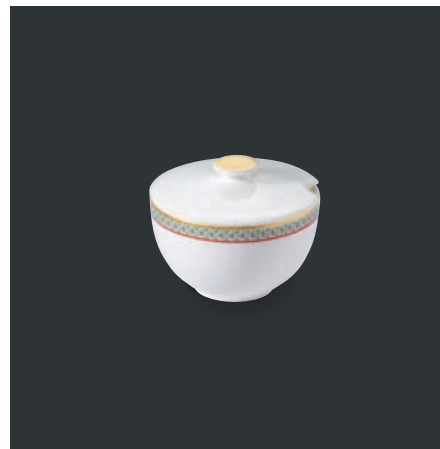 

Zuckerdose rund 0,25 l
Sugar bowl with lid round 0.25 l
01 160 142 00



Dessertschale 16 cm | *Oatmeal bowl 16 cm*
01 207 142 00

PURE GOLD | DECORATIONS



PURE GOLD | DECORATIONS



Teller flach 16 cm | *Side plate 16 cm*
01 016 018 00



Teller flach 21 cm | *Dessert plate 21 cm*
01 021 018 00



Teller flach 26,5 cm | *Plate 26.5 cm*
01 026 018 00



Teller flach 31 cm | *Buffet plate 31 cm*
01 031 018 00



Teller tief 23 cm | *Soup plate 23 cm*
01 055 018 00



Espresso Obertasse rund 0,11 l weiß
Espresso cup round 0.11 white
Untertasse 0,11 l | *Saucer 0.11 l*
01 102 000 00 / 01 103 018 00



Kaffee Obertasse rund 0,25 l weiß
Coffee / Tea cup round 0.25 white
Untertasse 0,20 l / 0,25 l | *Saucer 0.20 l / 0.25 l*
01 108 000 00 / 01 109 018 00



Espresso Obertasse zylindrisch 0,10 l
Espresso cup cylindrical 0.10 l
Untertasse zyl. 0,10 l | *Saucer cyl. 0.10 l*
02 102 018 00 / 02 103 018 00



Kaffee Obertasse zylindrisch 0,25 l
Coffee / Tea cup cylindrical 0.25 l
Untertasse zyl. 0,25 l | *Saucer cyl. 0.25 l*
02 108 018 00 / 02 109 018 00

PURE GOLD | DECORATIONS



Platte oval 34 cm | *Oval platter 34 cm*
01 220 018 00



Platte oval 39 cm | *Oval platter 39 cm*
01 222 018 00



Sauciere 0,48 l weiß | *Sauce boat 0.48 l white*
Sauciere Untere Pure Gold
Sauce boat stand Pure Gold
01 232 000 00 / 01 234 018 00

STARDUST | DECORATIONS



Design: Christiana de Corte, Paris

STARDUST | DECORATIONS



Teller flach 16 cm | *Side plate 16 cm*
03 016 113 00



Teller flach 21 cm | *Dessert plate 21 cm*
03 021 113 00



Teller flach 28 cm | *Plate 28 cm*
03 028 113 00



Teller flach 32 cm | *Buffet plate 32 cm*
03 032 113 00



Schale 17 cm, 0,30 l *Delice*
Bowl 17 cm, 0,30 l *Delice*
03 207 113 00



Teller tief 25 cm *Delice*
Soup plate 25 cm Delice
03 059 113 00



Platte oval / *Fischteller 32 cm*
Oval platter / Fish plate 32 cm
03 220 113 00



Platte oval / *Fischteller 39 cm*
Oval platter / Fish plate 39 cm
03 220 113 00

STARDUST | DECORATIONS



Espresso Obertasse rund 0,11 l, Golden Lane
Espresso cup round 0.11 l, Golden Lane
Untertasse 0,11 l | Saucer 0.11 l
01 102 017 00 / 01 103 113 00



Kaffee Obertasse rund 0,25 l, Golden Lane
Coffee / Tea cup round 0.11 l, Golden Lane
Untertasse 0,20 l / 0,25 l
Saucer 0.20 l / 0.25 l
01 108 017 00 / 03 109 113 00

ORNAMENT GOLD & BLACK —
GOLDRAUSCH (GOLDFEVER) | DECORATIONS



ORNAMENT GOLD & BLACK —
GOLDRAUSCH (GOLDFEVER) | DECORATIONS



Teller flach 16 cm | *Side plate 16 cm*
03 016 111 03




Teller flach 21 cm | *Dessert plate 21 cm*
03 021 111 03




Teller flach 28 cm | *Plate 28 cm*
03 028 111 03



Teller flach 32 cm | *Buffet plate 32 cm*
03 032 111 03

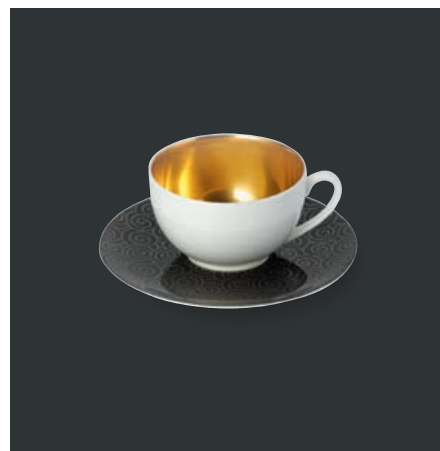 

Kaffee Obertasse rund 0,25 l Goldrausch
Coffee / Tea cup round 0.25 l Goldfever
Untertasse 0,20 l / 0,25 l | *Saucer 0.20 l / 0.25 l*
01 108 106 00 / 03 109 111 03

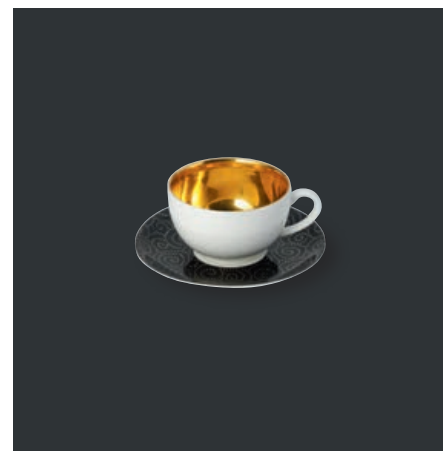 

Kaffee Obertasse rund 0,11 l Goldrausch
Coffee / Tea cup round 0.11 l Goldfever
Untertasse 0,11 l | *Saucer 0.11 l*
01 102 106 00 / 01 103 111 03


GOLDRAUSCH (GOLDFEVER) | DECORATIONS




GOLDRAUSCH (GOLDFEVER) | DECORATIONS



 Espresso Obertasse rund 0,11 l
Espresso cup round 0.11 l
Untertasse 0,11 l weiß
Saucer 0.11 l white
01 102 106 00 / 01 103 000 00

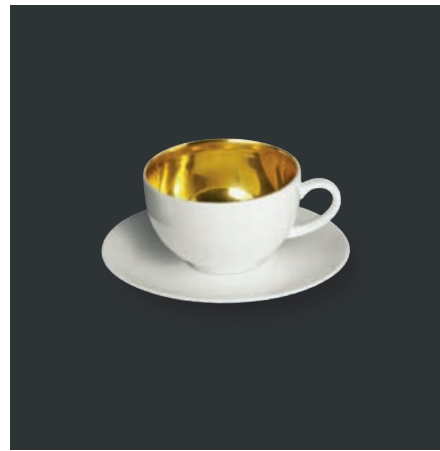

 Kaffee Obertasse rund 0,25 l
Coffee / Tea cup round 0.25 l
Untertasse 0,20 l / 0,25 l weiß
Saucer 0.20 l / 0.25 l white
01 108 106 00 / 03 109 000 00

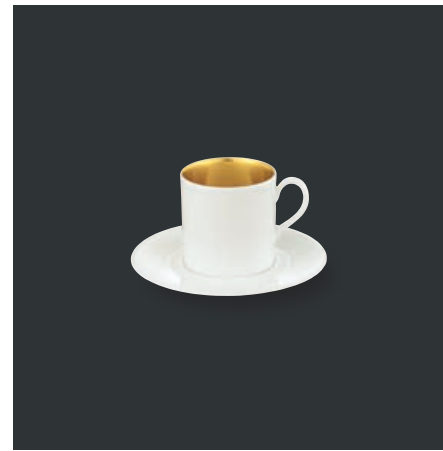


Espresso Obertasse zylindrisch 0,10 l
Espresso cup cylindrical 0.10 l
Untertasse zylindrisch flach 0,10 l weiß
Saucer cylindrical flat 0.10 l white
02 102 106 00 / 02 110 000 00

GOLDRAUSCH (GOLDFEVER) | DECORATIONS



Schale 10 cm, 0,20 l | *Bowl 10 cm, 0.20 l*
03 200 106 00

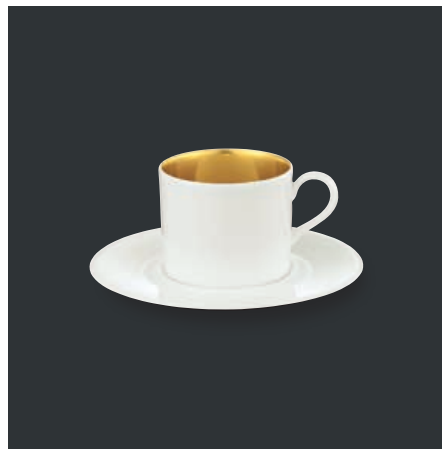 

Kaffee Obere zylindrisch 0,25 l
Coffee cup cylindrical 0.25 l
Untertasse zylindrisch flach 0,25 l weiß
Saucer cylindrical flat 0.25 l white
02 108 106 00 / 02 111 000 00



Schale oval 14 cm, 0,30 l
Bowl oval 14 cm, 0.30 l
09 207 106 00




Dip-Schale rund 8 cm
Dip bowl round 8 cm
04 194 106 00



Dip-Schale oval 13,5 cm
Dip bowl oval 13.5 cm
04 195 106 00



Schale oval 20 cm | *Bowl oval 20 cm*
04 196 106 00

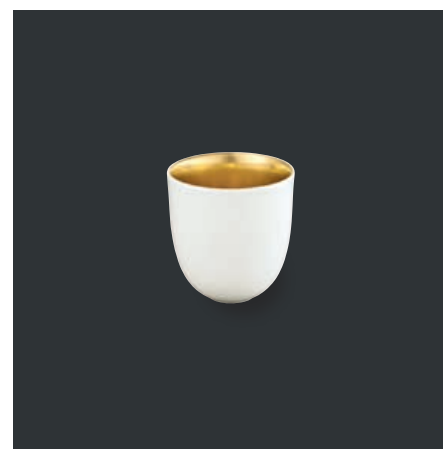 


Becher ohne Henkel 0,25 l | *Mug 0.25 l*
03 144 106 00


METROPOLITAN GOLD | DECORATIONS



METROPOLITAN GOLD | DECORATIONS

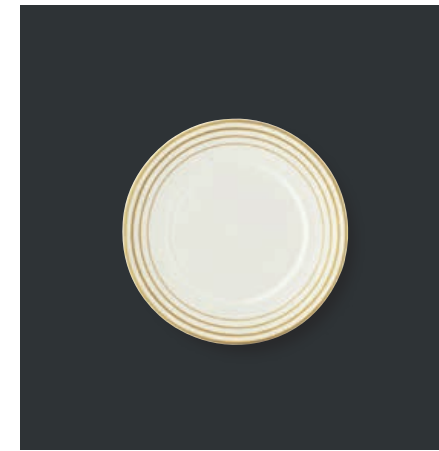 

Teller flach 17 cm | Side plate 17 cm
10 017 116 01

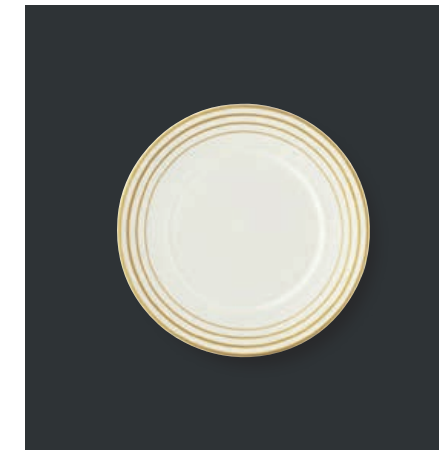 

Teller flach 22 cm | Plate 22 cm
10 022 116 01



Teller flach 28 cm | Plate 28 cm
10 028 116 01



Teller flach 32 cm | Buffet plate 32 cm
10 032 116 01



Teller tief 25 cm | Soup plate 25 cm
10 055 116 01



Platte oval 34 cm | Oval platter 34 cm
10 220 116 01



Platte oval 39 cm | Oval platter 39 cm
10 222 116 01



Kaffee Obertasse 0,28 l | Coffee cup 0.28 l
Untertasse 0,28 l / 0,32 l | Saucer 0.28 l / 0.32 l
10 112 116 01 / 01 113 116 01



Espresso Obertasse Vienna 0,11 l
Espresso cup Vienna 0.11 l
Untertasse 0,11 l | Saucer 0.11 l
01 130 116 01 / 01 103 116 01

METROPOLITAN GOLD | DECORATIONS



Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 116 01



Teekanne rund 0,90 l | *Teapot round 0.90 l*
01 172 116 01




Schale 10 cm, 0,20 l | *Bowl 10 cm, 0.20 l*
01 200 116 01

GOLDEN LANE | DECORATIONS



GOLDEN LANE | DECORATIONS

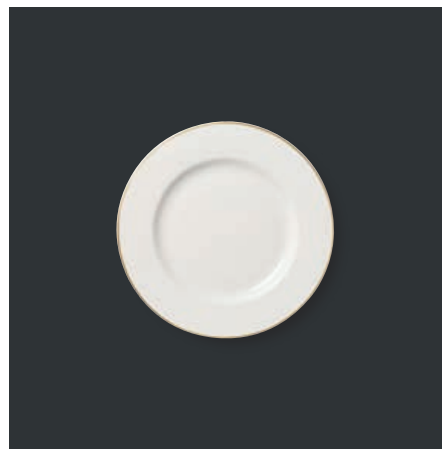 

CLASSIC

Teller flach 16 cm | *Side plate 16 cm*
01 016 017 00



Teller flach 21 cm | *Dessert plate 21 cm*
01 021 017 00




Teller flach 26,5 cm | *Plate 26,5 cm*
01 026 017 00



Teller flach 28 cm | *Plate 28 cm*
01 028 017 00



Teller flach 31 cm | *Buffet plate 31 cm*
01 031 017 00

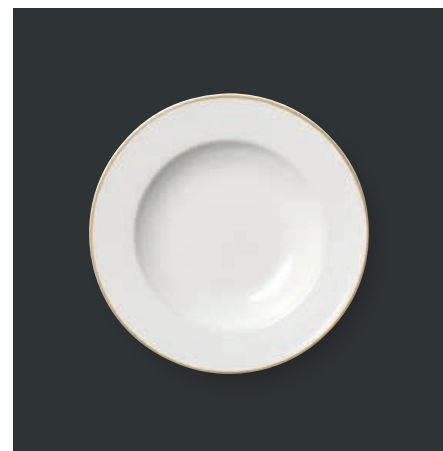 

Teller tief 23 cm | *Soup plate 23 cm*
01 055 017 00



Platte oval 34 cm | *Oval platter 34 cm*
01 220 017 00




Platte oval 39 cm | *Oval platter 39 cm*
01 222 017 00




Schüssel 21 cm, 1,50 l | *Salad bowl 21 cm, 1.50 l*
01 210 017 00
Schüssel 24 cm, 2 l | *Salad bowl 24 cm, 2 l*
01 212 017 00

GOLDEN LANE | DECORATIONS

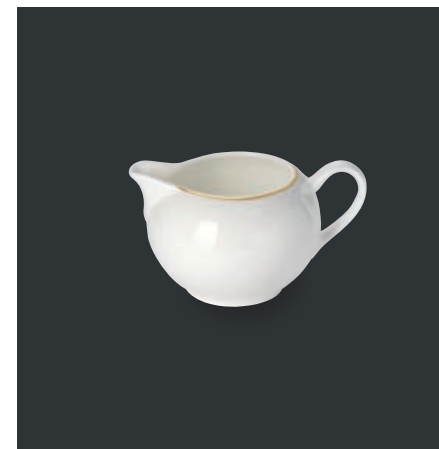 

CLASSIC

Gießer rund 0,30 l | *Creamer round 0.30 l*
01 151 017 00

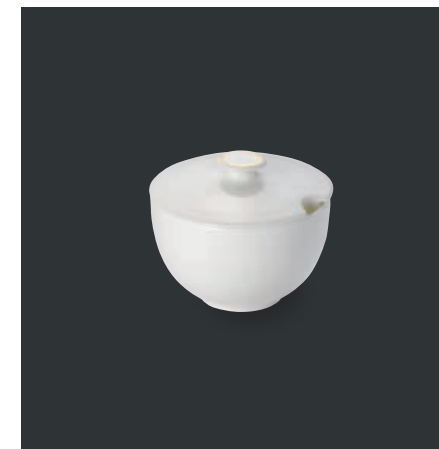 


Zuckerdose rund 0,25 l | *Sugar bowl with lid round 0.25 l*
01 160 017 00




Teekanne rund 1,30 l | *Teapot round 1.30 l*
01 174 017 00



Espresso Obertasse rund 0,11 l | *Espresso cup round 0.11 l*
Untertasse 0,11 l | *Saucer 0.11 l*
01 102 017 00 / 01 103 017 00

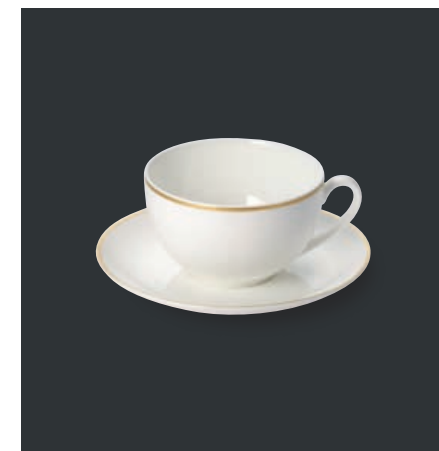 

Kaffee Obertasse rund 0,25 l | *Coffee / Tea cup round 0.25 l*
Untertasse 0,20 l / 0,25 l | *Saucer 0.20 l / 0.25 l*
01 108 017 00 / 01 109 017 00

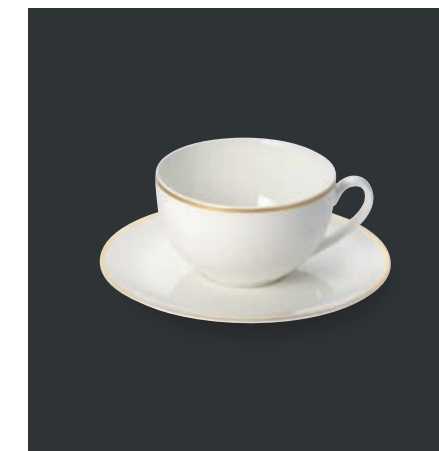 

PURE

Kaffee Obertasse rund 0,25 l | *Coffee / Tea cup round 0.25 l*
Untertasse 0,20 l / 0,25 l | *Saucer 0.20 l / 0.25 l*
01 108 017 00 / 03 109 017 00



Teller flach 16 cm | *Side plate 16 cm*
03 016 017 00



Teller flach 21 cm | *Dessert plate 21 cm*
03 021 017 00



Teller flach 26 cm | *Plate 26 cm*
03 026 017 00

GOLDEN LANE | DECORATIONS



PURE

Teller flach 28 cm | *Plate 28 cm*
03 028 017 00



Teller flach 32 cm | *Buffet plate 32 cm*
03 032 017 00



Teller tief 22,5 cm | *Soup plate 22.5 cm*
03 055 017 00



Platte oval / *Fischplatte 32 cm*
Oval platter / Fish plate 32 cm
03 220 017 00



Platte oval 39 cm | *Oval platter 39 cm*
03 222 017 00

SAVOY | DECORATIONS



Design: Dibbern Design Studio

SAVOY | DECORATIONS



Teller flach 16 cm | *Side plate 16 cm*
01 016 014 00



Teller flach 21 cm | *Dessert plate 21 cm*
01 021 014 00



Teller flach 26,5 cm | *Plate 26.5 cm*
01 026 014 00

SAVOY | DECORATIONS



Platte oval 34 cm | *Oval platter 34 cm*
01 220 014 00



Platte oval 39 cm | *Oval platter 39 cm*
01 222 014 00



Teller flach 31 cm | *Buffet plate 31 cm*
01 031 014 00



Teller tief 23 cm | *Soup plate 23 cm*
01 055 014 00



Espresso Obertasse rund 0,11 l
Espresso cup round 0.11 l
Untertasse 0,11 l | *Saucer 0.11 l*
01 102 014 00 / 01 103 014 00



Kaffee Obertasse rund 0,25 l
Coffee / Tea cup round 0.25 l
Untertasse 0,20 l / 0,25 l | *Saucer 0.20 l / 0.25 l*
01 108 014 00 / 01 109 014 00



Espresso Obertasse zylindrisch 0,10 l
Espresso cup cylindrical 0.10 l
Untertasse zyl. 0,10 l | *Saucer cyl. 0.10 l*
02 102 014 00 / 02 103 014 00



Kaffee Obertasse zylindrisch 0,25 l
Coffee / Tea cup cylindrical 0.25 l
Untertasse zyl. 0,25 l | *Saucer cyl. 0.25 l*
02 108 014 00 / 02 109 014 00

